

the Control °Freak™

Safety instructions and warnings - GMC850



Sage | PolyScience™

SAGE | POLYSCIENCE RECOMMENDS SAFETY FIRST

At Sage | PolyScience we are very safety conscious.

We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL
INSTRUCTIONS BEFORE
USE AND SAVE FOR
FUTURE REFERENCE

- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance.

If you have any concerns please contact your local electricity company.

- Your Sage | PolyScience appliance includes a BS 13 amp moulded mains plug on the supply cord.
- Should you need to change this plug, please complete the rewiring as follows (after safe disposal of the moulded plug).
- Please note that a cut off plug inserted into a socket is a serious danger risk.
- Wires are coloured as follows:
 - Blue = Neutral
 - Brown = Live
 - Green & Yellow = Earth
- As the colours of the wire may not correspond with the coloured markings which identify the terminals in your plug, please refer to the following:
 - The Blue wire must be connected to the terminal which is marked 'N'.

- The Brown wire must be connected to the terminal which is marked with the letter 'L'.
 - The Green & Yellow wire must be connected to the terminal which is marked with the letter E or the earth symbol \perp .
 - Please note that if a 13 amp plug is used, a 13 amp fuse should be used.
 - Remove and safely discard any packaging material and promotional labels before using the Sage | PolyScience induction cooker for the first time.
 - To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted over the pins of the power plug when unpacking this appliance for the first time.
 - Do not place the appliance near the edge of a bench top, counter or table during operation.
- Ensure that the surface is level, clean and free of water and other substances.
- Do not place this appliance on a hot electric or gas burner, or where it could touch a heated oven.
 - The use of accessory attachments which are not recommended by the appliance manufacturer may cause injuries.
 - Do not move the appliance during cooking or while a cookware remains on the induction cooker.
 - Always operate the induction cooker on a dry, stable and heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
 - Position the induction cooker clear of walls, and other heat sensitive materials such as cloths and curtains.

- Minimum of 20cm (8 inch) distance from walls.
- Do not use this appliance on a sink drain board.
 - Do not leave the appliance unattended when in use.
 - If the appliance is not in use for an extended period, disconnect the appliance from the power outlet.
 - Use only cooking pans and pots suitable for use with an induction cooker.
 - Do not operate the appliance in the vicinity of magnetically sensitive objects (e.g. magnetic cards).
 - The appliance is not intended to be operated by means of an external timer or separate remote control system.
 - The temperature of accessible surfaces will be high when the appliance is operating and for some time after use.
- Do not place anything on top of the appliances surface (except induction compatible cookware) when in use and when stored.
 - Do not place metallic utensils, non-compatible induction cookware, lids, knives, forks, spoons or other metallic objects on the induction cooker glass ceramic plate, as these may be heated and become hot when the appliance is switched on.
 - Take care when operating the appliance as rings, watches and similar objects worn by user could get hot when in close proximity to the hob surface.
 - Do not insert sharp objects into the ventilation system.
 - To avoid overheating, do not place any aluminum foil or metal plates on the appliance.

- Do not touch the hot surface of the glass ceramic plate. The induction cooker does not heat up itself during cooking, but the temperature of the cookware heats up the glass ceramic plate.
 - Do not heat any opened or unopened cans on the induction cooker.
 - Do not cook on a broken cook-top as cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock.
 - Clean Cook-Top with Caution - If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface.
 - Always use the power button to switch the appliance off,
- switch off the switch at the power outlet, then unplug the power cord and cool completely, if appliance is not in use, before cleaning, before attempting to move the appliance, and when storing the appliance.
- We recommend use of Sage induction cookware to obtain the best cooking results.
 - Only use pans and pots that are made of induction cooking compatible materials, minimum pan diameter of pot should not be smaller than 14cm (5.5 inch).
 - Keep the appliance clean.
 - After use, switch the appliance off. Do not rely on the pan detector.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- To protect against electric shock, do not immerse the cord, plug or appliance in water or any other liquid.

- Do not allow the cord to hang over the edge of a table or bench, touch hot surfaces or become knotted.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- It is recommended to regularly inspect the appliance.

Do not use the appliance if the power supply cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Sage | PolyScience Service Centre for examination and/or repair.

- Any maintenance other than cleaning should be performed at an authorised Sage | PolyScience Service Centre.
- Do not use in moving vehicles or boats. Do not use outdoors. Do not use this appliance for anything other than its intended use. Misuse may cause injury.
- Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

 **WARNING**

- Before use, people with electronic implants such as pacemakers, etc., and or other health issues should consult their doctor, as the induction cooker generates a magnetic field.
- If the glass ceramic plate surface is cracked, switch off the appliance to avoid the possibility of electric shock.

- Return the appliance to the nearest authorised Sage | PolyScience service centre for repair.
- Always keep in mind that the induction cooker, after being switched off, will continue to radiate residual heat on the glass ceramic plate heating surface.
- Do not use these induction cooker within reach of young children.



The symbol shown indicates that this appliance should not be disposed of in normal household waste. It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.

**SAVE THESE
INSTRUCTIONS**

Sage® | **PolyScience**™

Sage and The Control Freak are trademarks of Breville Pty, Ltd. Sage,
The Control Freak and Polyscience are used and distributed under license to BGR Appliances Limited.

Due to continued product improvement, the products illustrated/photographed
in this booklet may vary slightly from the actual product.

Copyright BRG Appliances 2018.

GMC850BSS2GUK1 - B18