




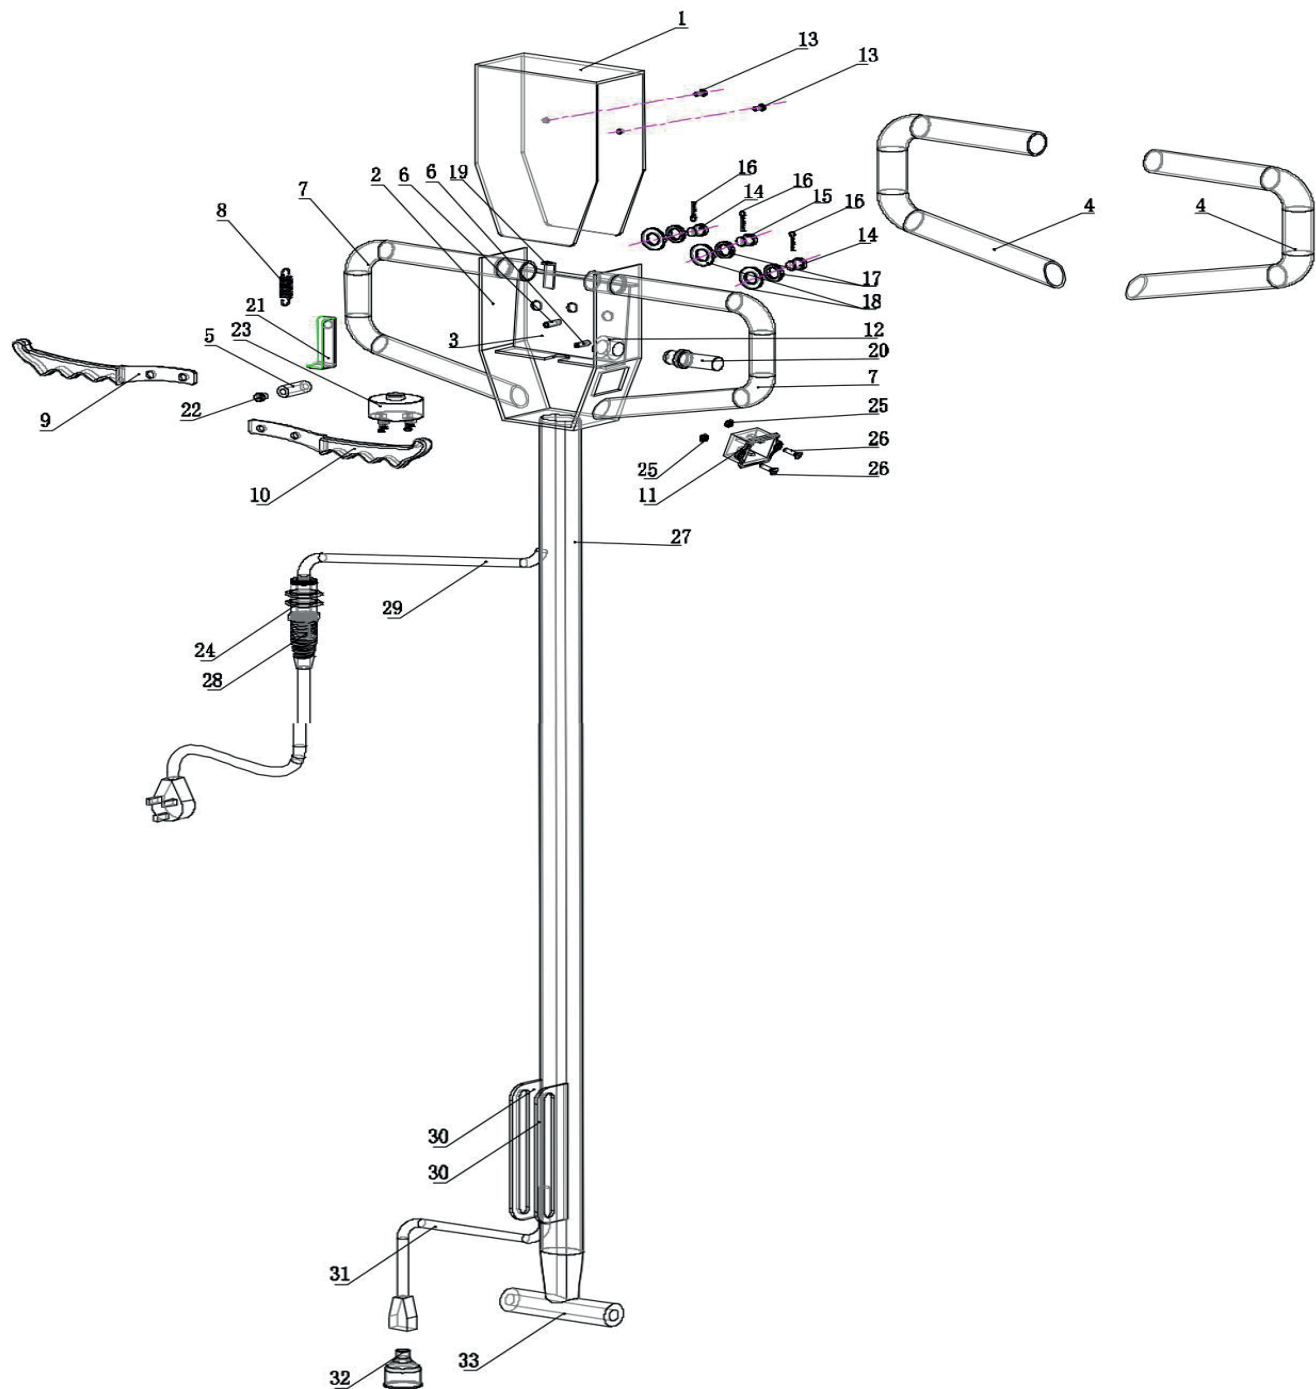

№	Артикул	Наименование	Кол
1	A1714EVO	Decoration cover, metal	1
2	A1715EVO	Frame. metal	1
3	A1716EVO	Plate	1
4	A1717EVO	Handle cover	2
5	A1718EVO	Bolt	1
6	A1719EVO	Bolt	2
7	A1720EVO	Handle	1
8	A1721EVO	Spring	1
9	A1722EVO	lever, left	1
10	A1723EVO	lever, right	1
11	A1724EVO	Socket	1
12	A1725EVO	Screw	2
13	A1726EVO	Screw	2
14	A1727EVO	Bolt	2
15	A1728EVO	Bolt	2
16	A1729EVO	Pin	3
17	A1730EVO	Washer	3
18	A1731EVO	Washer	3
19	A1732EVO	Press knob	1
20	A1733EVO	Reset button	1
21	A1734EVO	Bracket	1
22	A1735EVO	Screw	1
23	A1736EVO	Relay	1
24		/	
25	A1737EVO	Washer	2
26	A1738EVO	Screw	2
27	A1739EVO	Metal tube	1
28		/	
29	A1740EVO	Cord	1
30	A1741EVO	Support bracker	2
31	A1742EVO	Cord	1
32	A1743EVO	Cord socket	1
33	A1744EVO	Metal tube	1

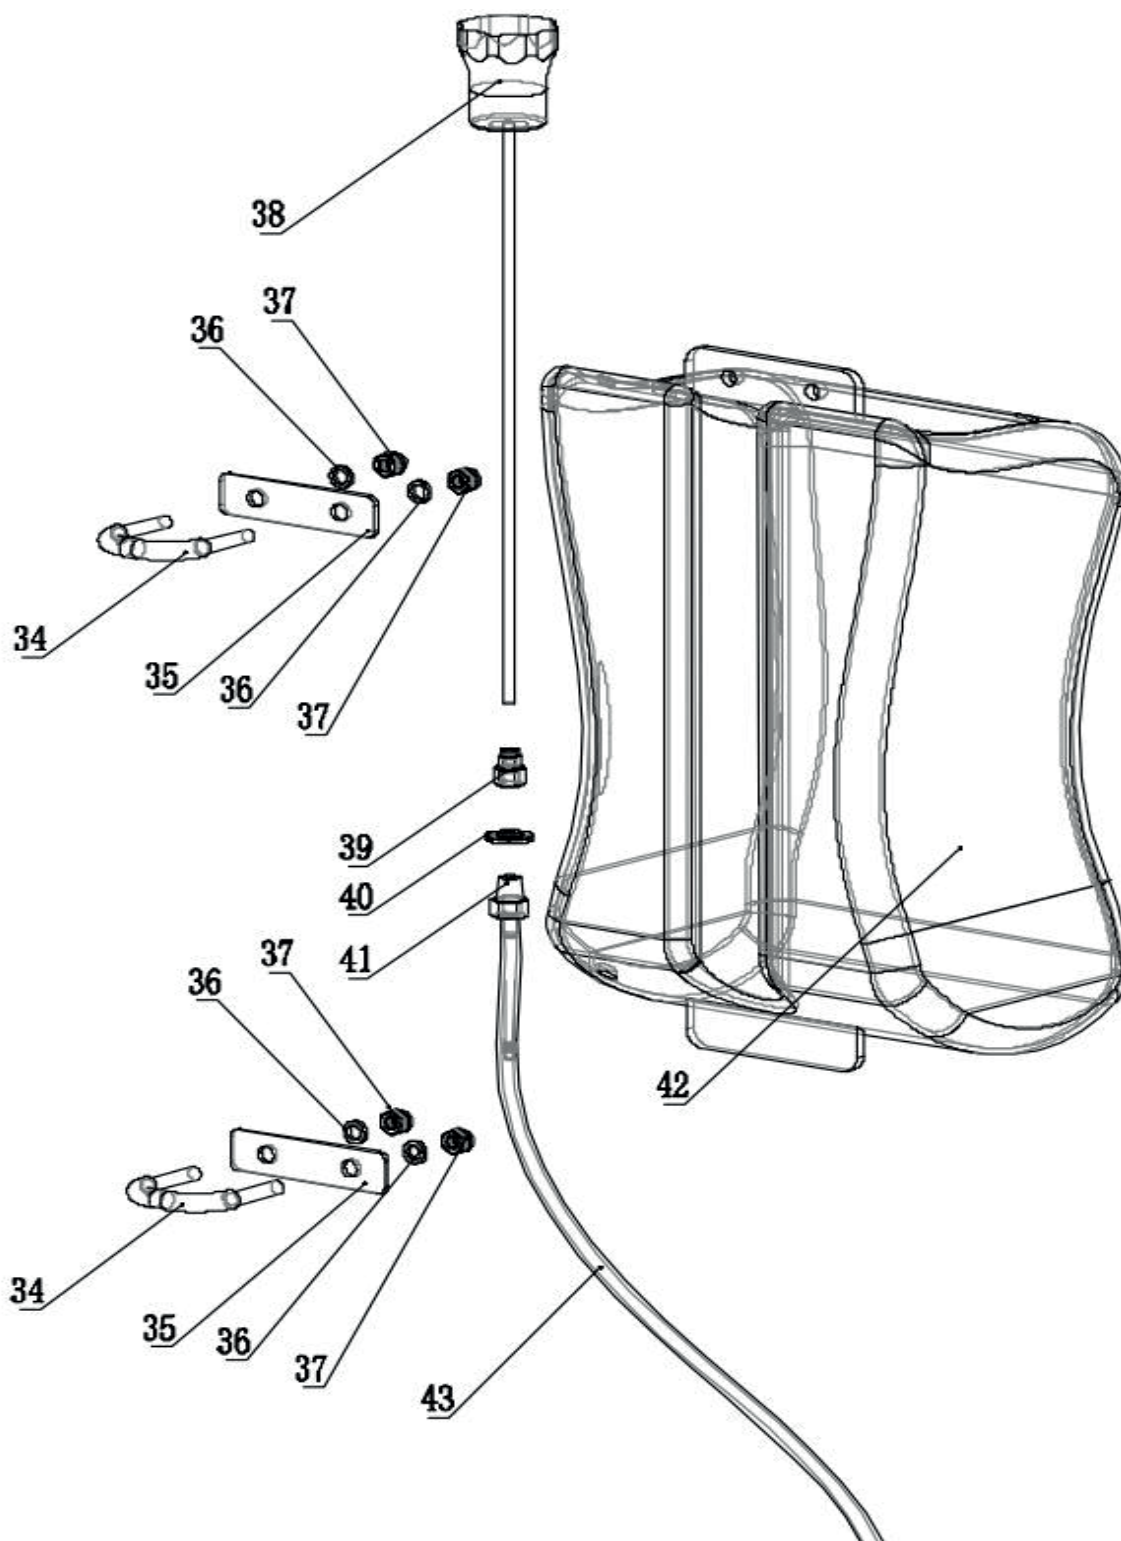

№	Артикул	Наименование	Кол
34	A1745EVO	U link	2
35	A1746EVO	plate	2
36	A1747EVO	washer	4
37	A1748EVO	nut	4
38	A1749EVO	water adjust knob	1
39	A1750EVO	bolt	1
40	A1751EVO	rubber seal	1
41	A1752EVO	bolt	1
42	A1753EVO	water tube	1
43	A1754EVO	tube	1

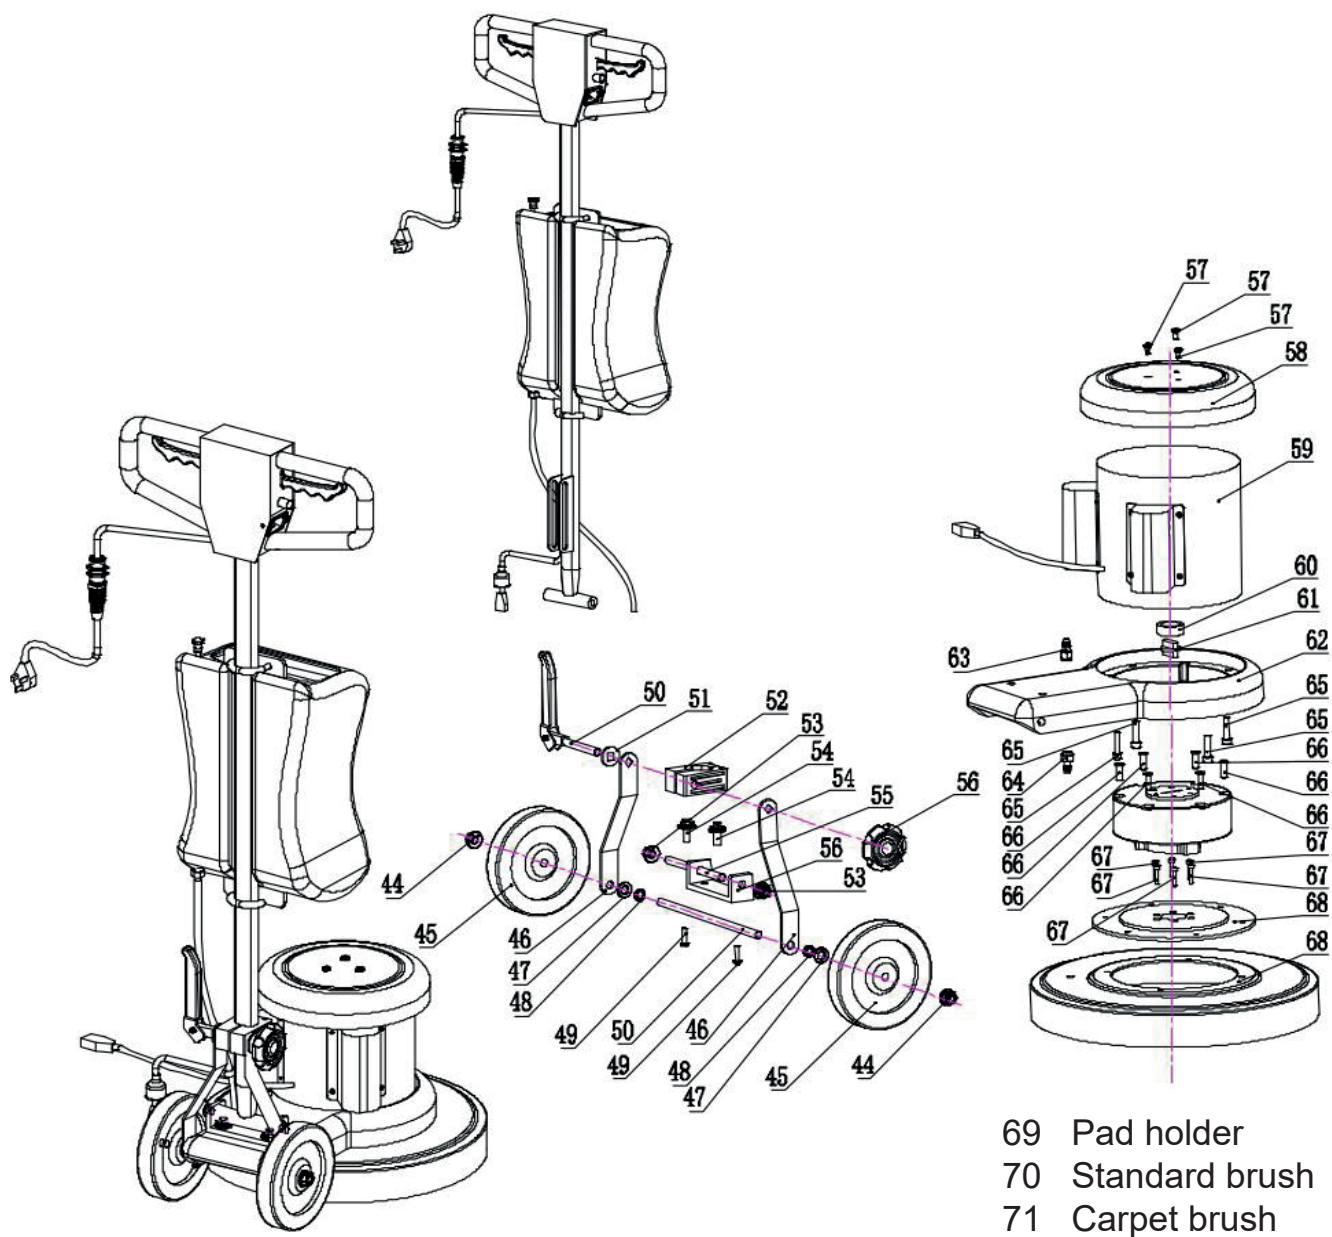

№	Артикул	Наименование	Кол
44	A1755EVO	Nut, Hex	2
45	A1756EVO	Wheel	2
46	A1757EVO	Plate	2
47	A1758EVO	Nut, Hex	2
48	A1759EVO	Nut	2
49	A1760EVO	Screw	2
50	A1761EVO	Axle	1
51	A1762EVO	Washer, Flat	1
52	A1763EVO	lock	1
53	A1764EVO	nut	2
54	A1765EVO	bolt	1
55		/	1
56		/	1
57	A1766EVO	srew	3
58	A1767EVO	metal cover	1
59	A1768EVO	brush motor	1
60	A1769EVO	bush	1
61	A1770EVO	bolt	1
62	A1771EVO	metal shell	1
63	A1772EVO	bolt	1
64	A1773EVO	bolt	1
65	A1774EVO	bolt	4
66	A1775EVO	gear box	5
67	A1776EVO	bolt	5
69	A1713EVO	Pad holder	1
70	A1711EVO	Standard brush	1
71	A1712EVO	Carpet brush	1