






1

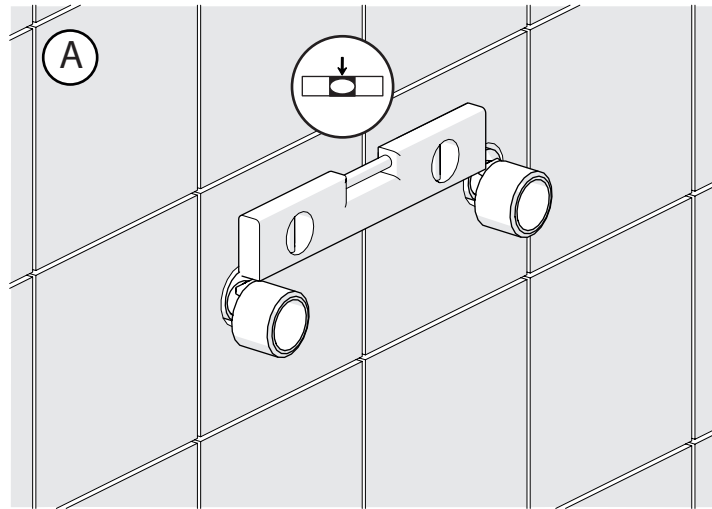


3

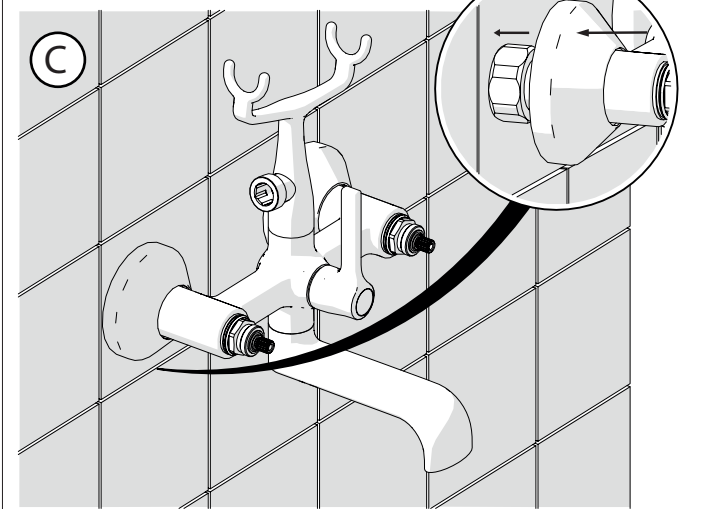



5

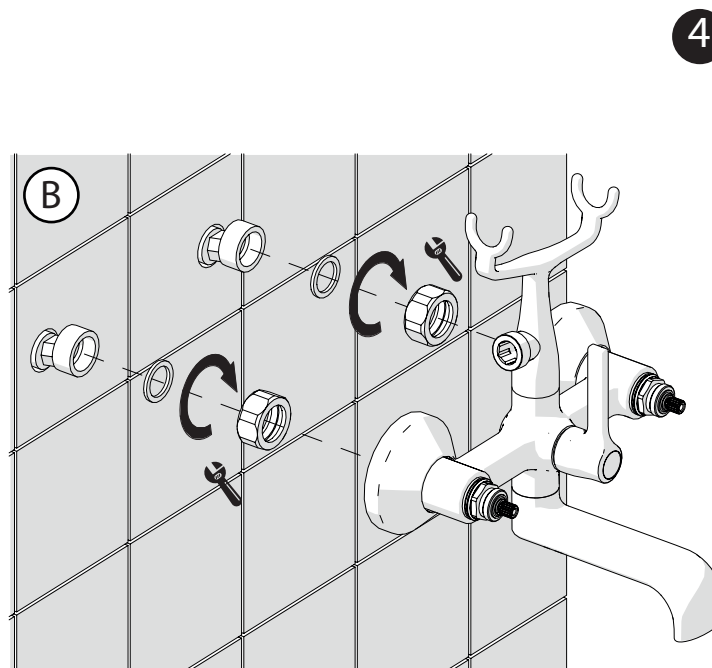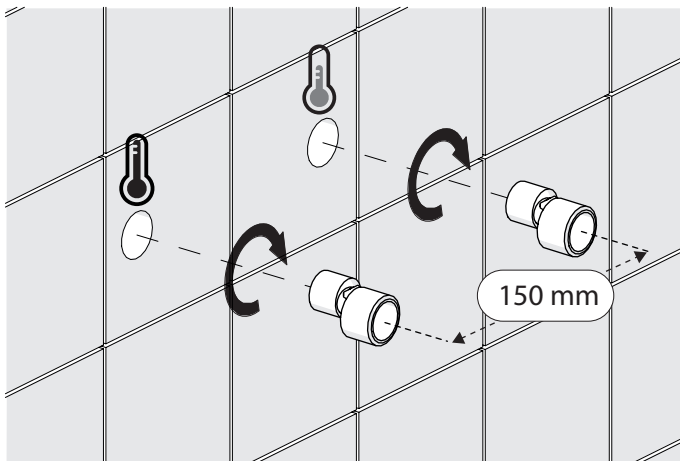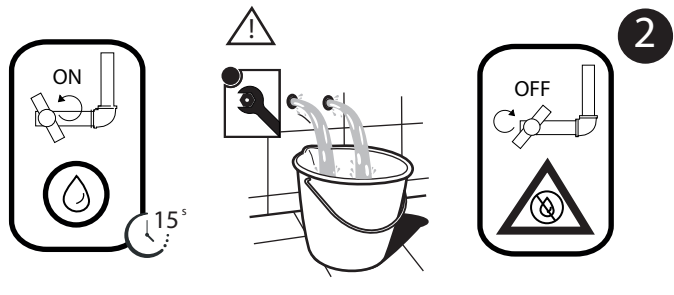


4

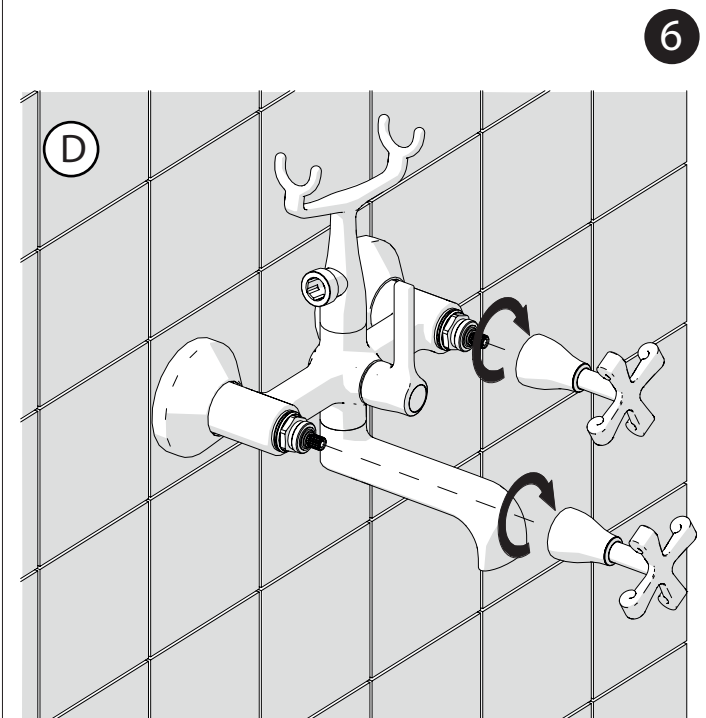

6

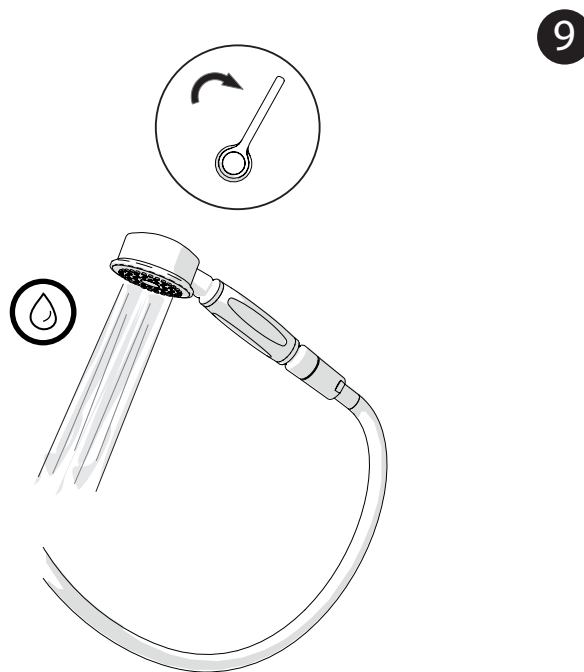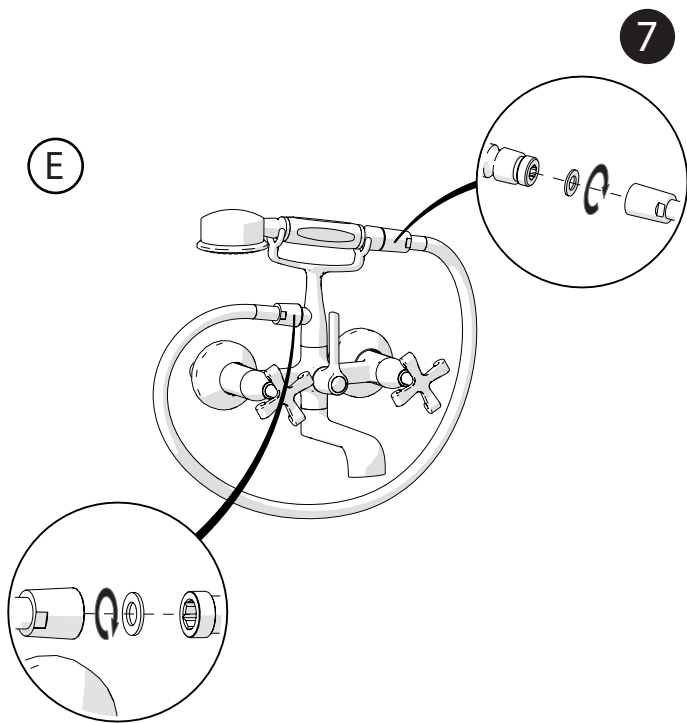

NOBILIS®
The Best Technology for Water

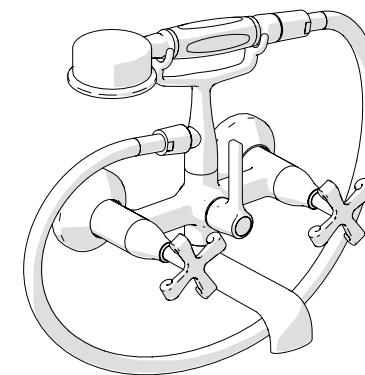


CP210



IISTRCP210#---STD





www.grupponobili.it

REV.2.07/2017

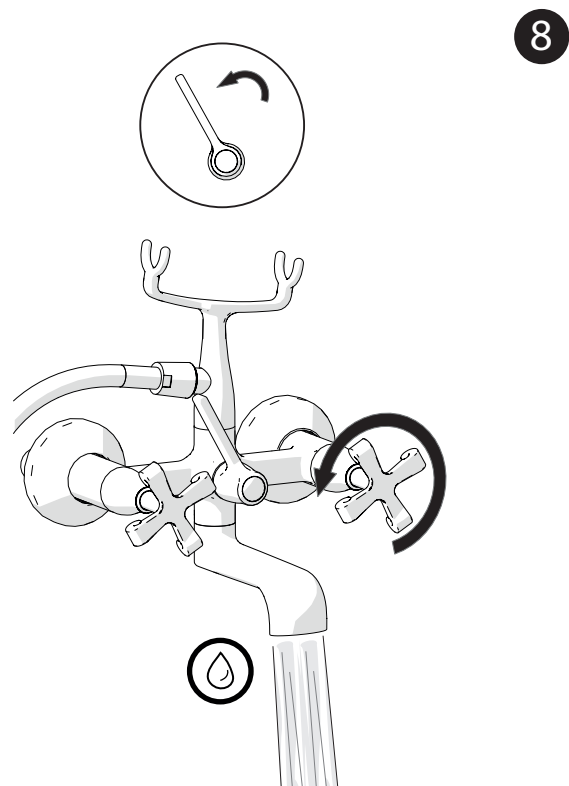

10

Insert the 2 columns into the 2 Ø 30 mm top holes with 150 mm spacing
Screw the external bath assembly with the gaskets using the CH 30 mm key

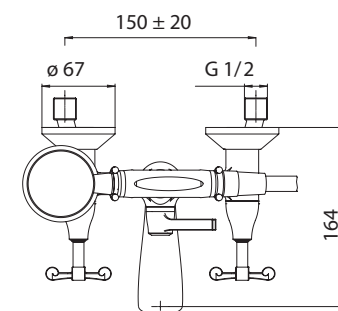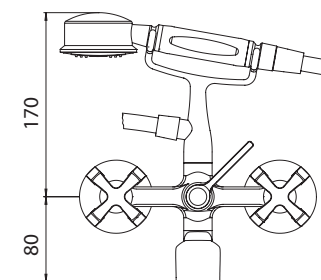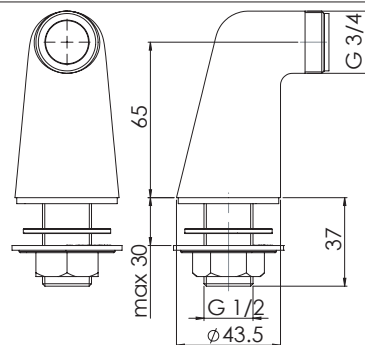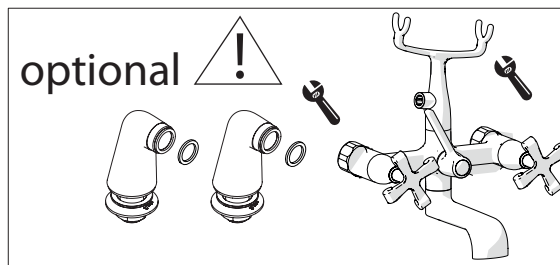

PULIZIA / CLEANING	
	ACQUA WATER ✓
	ALCOOL ✓
	MICROFIBRA MICROFIBER ✓
	SPUGNA SPONGE ✗
	DETERGENTI DETERGENT ✗

